 


RECOMMENDED PLACEMENT

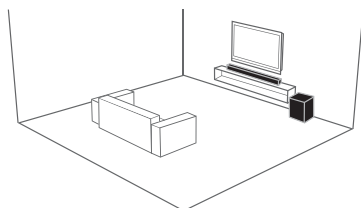

Soundbar: Under the TV (if wall-mounted)/ in front of the TV.

Subwoofer: On the floor, alongside the TV / in the front corner of the room.

Speaker Specification	
Cell	Speaker:6cell; Subwoofer:1cell
Frequency range(HZ)±15	Speaker:500~20000; Subwoofer:20~300
Sensitivity(dB) (HZ)±3dB	Speaker:83; Subwoofer:88
Impedance(Ω)±20%	Speaker:8; Subwoofer:4
Main channel output power	20W+20W(8Ω,1KHz,0.7%THD)
Bass output power	80W(4Ω,100Hz,0.7%THD)
Main channel frequency response	20HZ-20KHZ±2dB
SNR	>75dB(AFR)
Input voltage	18V±5%
Rated power	120W
Maximum operating current	2.5A
Input signal source	Optical, AUX terminal,Bluetooth,USB,HDMI
Distortion	≤1%
Separation	≥40dB
Dynamic range	≥90dB
Optical sampling frequency decoding	8KHZ-96KHZ DAC: 24BIT 96KHZ Stereo

If you face any faults please contact nearest Elements point of sales.

2.1 SOUNDBAR WITH WIRELESS SUBWOOFER



User Manual


Model: EA404

Using the remote control:

- Place 4xAAA batteries into the battery compartment, ensuring correct polarity. After inserting the batteries, replace the battery compartment cover.
- If the remote control will not be used for a long period of time, remove the batteries to prevent damage from leakage.



Remote Control Buttons

- POWER**
Press to switch the unit between ON and STANDBY mode.
- PREV**
Play previous song or choose previous mode.
- PLAY/PAUSE**
Play music/pause music/FM scan.
- VOL-**
Reduce the volume.
- NEXT**
When playing music, press this button to go to the next song.
When selecting modes, press this button to select next mode.
- TV/ARC**
If HDMI OUT(ARC) of the soundbar is used to connect to the TV, press this button to ensure that sound from TV is played on the soundbar.
- TD**
TD sound effect switch.
- MODE**
The options are: BT, OPT, AUX, FM, HDMI.
If you plug in an USB device, the options are: BT, USB, OPT, AUX, FM.
- TREBLE**
Press TREBLE then press VOL +/- to adjust the treble.
- BASS**
Press BASS then press VOL +/- to adjust the bass.
- MUTE**
No sound.
- VOL+**
Increase the volume.
- EQ**
Sound mode switch.
- REPEAT**
In USB mode, press REPEAT button once to repeat a single song; press again to repeat all songs.
- RESET**
Press to go back to the initial default settings.

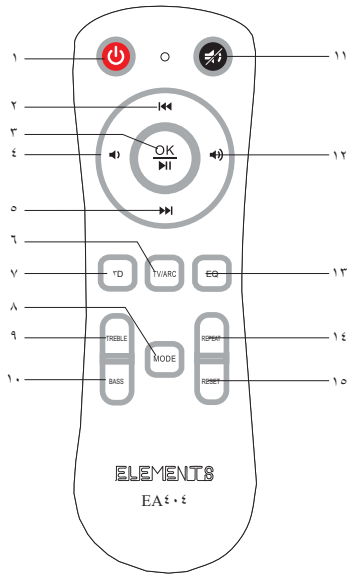



Front / Back Panels

FRONT

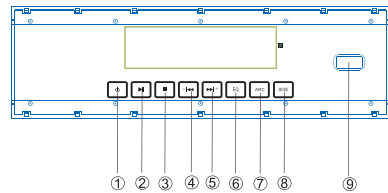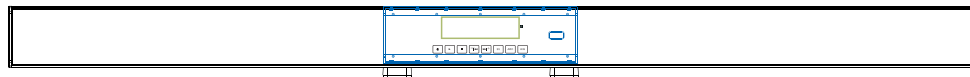


- STANDBY
- PLAY/PAUSE
- STOP
- PREV/VOL-
- NEXT/VOL+
- EQ
- ARC
- MODE
- USB


BACK

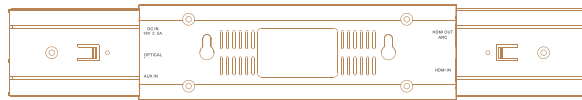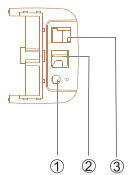


- AUX INPUT
- OPTICAL
- DC IN
- HDMI OUT(ARC)
- HDMI IN

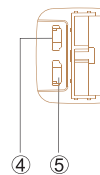

Subwoofer

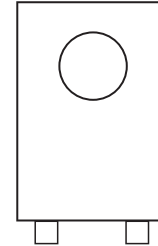

SOUNDBAR REAR PANEL

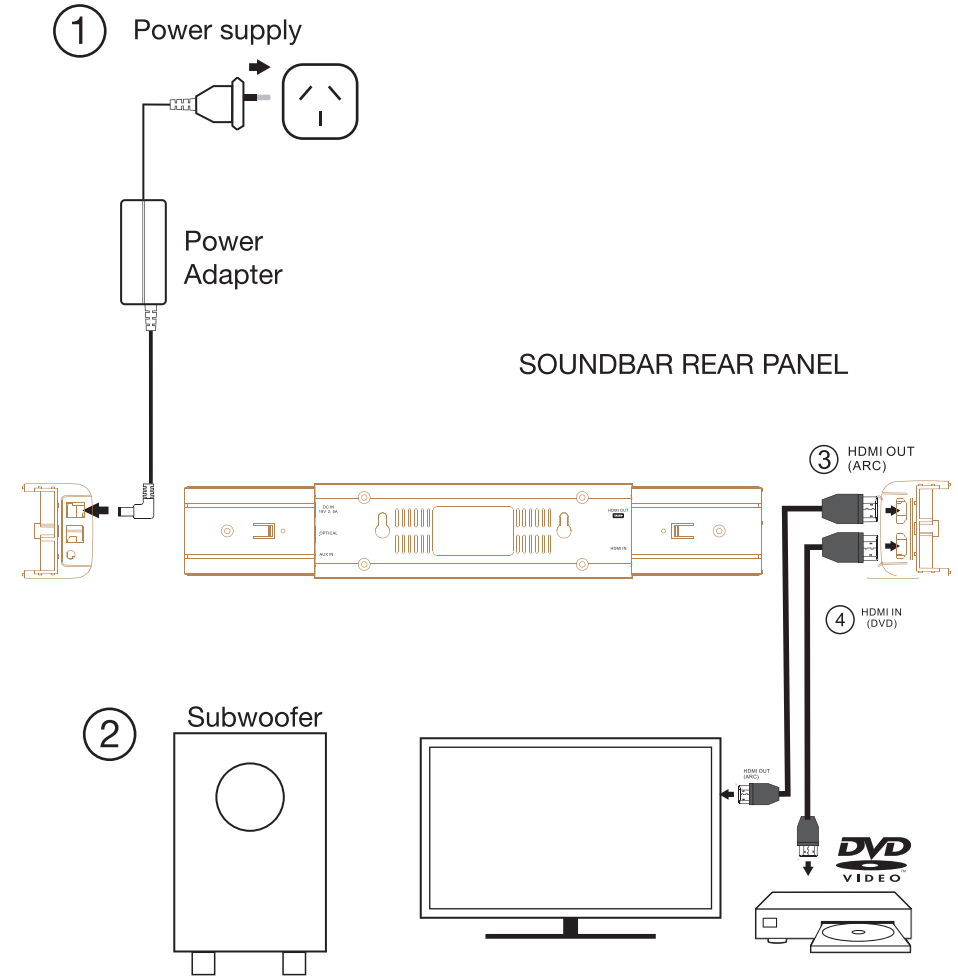


Connecting the sound bar to the TV:

- Connect the units power adaptor to the mains power supply.
- Connect the adaptor to the DC Input on the sound bar and turn the unit ON.
- Connect the subwoofer to the power source and turn ON. It will automatically pair with the sound bar.
- Connecting to TV: from HDMI(ARC) input on sound bar to HDMI(ARC) output on TV - then select the ARC function on the sound bar.
- Connecting to DVD: from HDMI input on the sound bar to HDMI output on the DVD unit.

Connecting the sound bar to other devices:

- From OPTICAL input of the sound bar to OPTICAL output on other device such as Blue-Ray/DVD Player/ Gaming Console.
- Other audio functions: Bluetooth/USB/AUX.

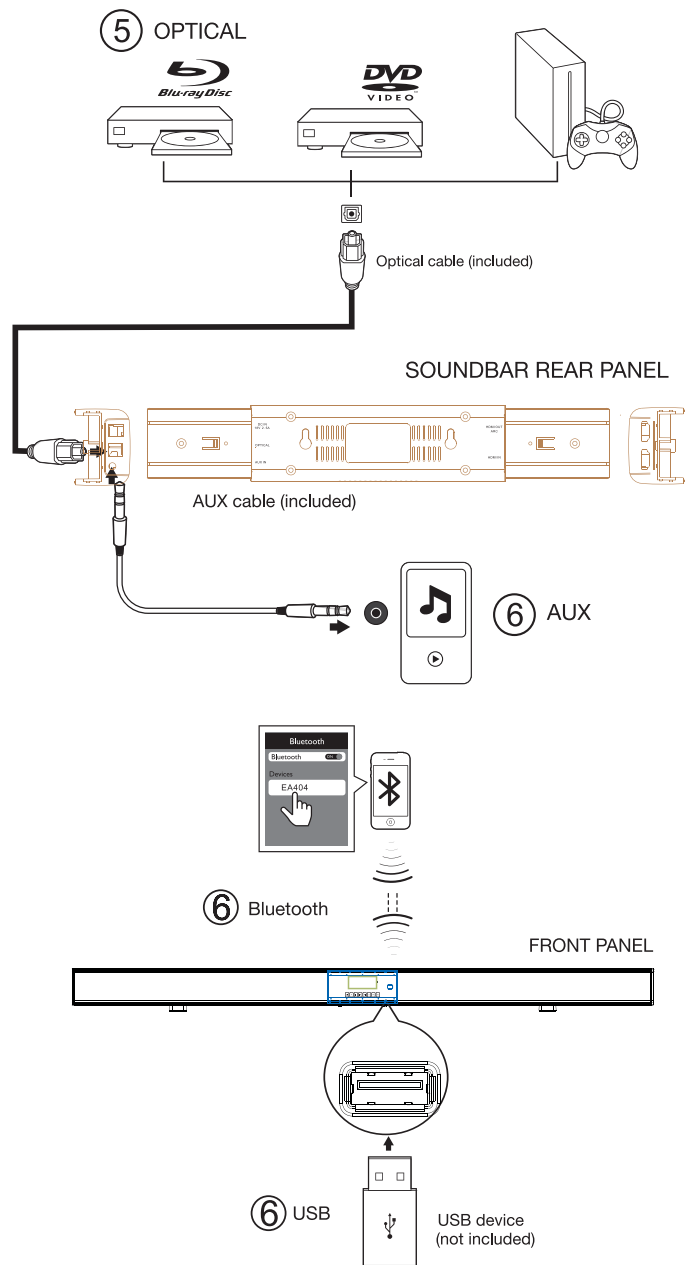

3

Installation Guide

IMAGE 1



IMAGE 2



IMAGE 3



- Assemble the three separate parts of the sound bar together per image 1 above.
- Once assembled, screw in the screws (included in the accessories) in the back of the sound bar per image 2 above. Installation is then complete (image 3).

Operating Instructions

- POWER ON:** Turn the power switch on at the back of the sound bar, the sound bar and subwoofer will then be in standby mode. The indicator light on the front panel will be red.
- ON / STANDBY:** Press the 'STANDBY' button on the front of the sound bar or the 'POWER' button on the remote control to switch on the unit. The indicator light will be blue.

Bluetooth Mode

- Press the 'MODE' button repeatedly until Bluetooth mode is selected. The display will show 'B/T'.
- On your Bluetooth-enabled device, choose 'EA404'. The indicator will blink to show that it is pairing and there will be a beep sound. Once pairing is successful, the indicator will remain on.
- Now you can play music from your Bluetooth-enabled device on the sound bar. Press the 'PREV' / 'NEXT' button on the remote control to play the previous or next song.

USB Mode

- Insert a USB memory device into the USB port.
- Press the 'MODE' button repeatedly until USB mode is selected. The display will show 'USB'.
- Now you can play music from the USB device on the sound bar.

Please note:

- In any working state, the mode automatically switches to USB when the USB device is plugged in.
- The music will be played in the same order as on the USB device. If song numbers are assigned, you can use numeric buttons on the remote control to play a particular song.
- The USB device must be formatted in "FAT 16/FAT 32/EXFAT" and the maximum size is 32G.
- Only mp3/wma/wav formats can be played.

Optical / AUX Mode

- Connect the device using any of these modes.
- Press MODE button repeatedly until the corresponding mode selected. The display will show "OPTUX".
- Now you can play music from the connected device on the sound bar.

FM Radio Mode

- Press "MODE" button repeatedly until "FM" mode is selected. The display shows "FM".
- Press "FM SCAN" on the remote control to auto search the available channels. These channels are stored in working state.
- Press "TUNING-" or "TUNING +" buttons to tune the channels manually.
- Press and hold "TUNING-" or "TUNING +" buttons to enter half auto search channel state. Here, it searches the available frequencies and stops at the next lower (TUNING-) or higher (TUNING+) frequency.

4